


AAP 314 and AAP 424 • Installation Guide



Follow the steps below to install an AAP 314 or AAP 424 mounting frame, along with the decorator-style modules and AAPs of your choice.

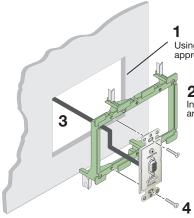


Using the supplied mud ring as a guide, mark and cut out the appropriate material within the marked area.

Insert the mud ring into the opening, and rotate the locking arms.

> Run all required cables from the output or input device location, behind the wall and to the module.

Mount the cabled module into the mud ring. Feed cables through the mud ring as necessary.



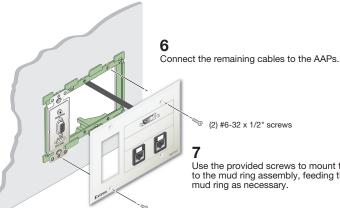

(2) #6-32 x 1/2" screws

Use the provided screws to mount the AAP 314 or AAP 424 to the mud ring assembly, feeding the cables through the mud ring as necessary.

(2) #6-32 x 1/4" screws

68-2521-50 Rev. B 04 17

Extron USA - West: +1.714.491.1500 FAX: +1.714.491.1517 Extron USA Headquarters +1.800.633.9876 (Inside USA/Canada Only) Extron USA - East: +1.919.850.1000 FAX: +1.919.850.1001